


# marantz

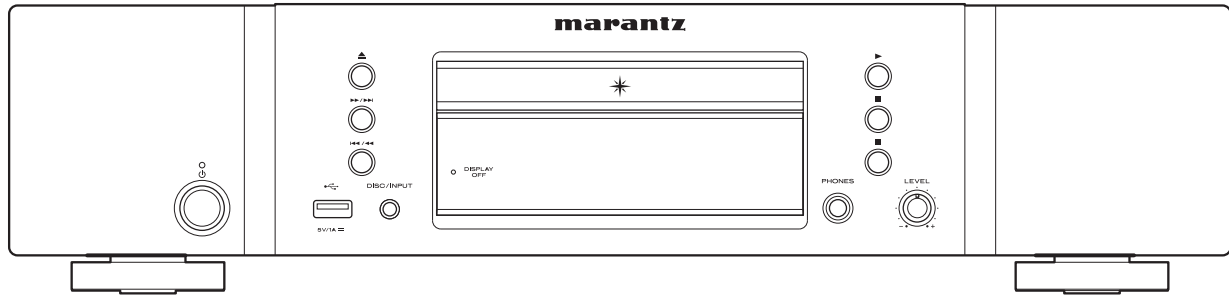

CD6007 | CD Player

QUICK START GUIDE

# Welcome

 
Thank you for choosing a Marantz CD player. This guide provides step-by-step instructions for setting up your CD player.

# Before You Begin

## What's In the Box

---

Quick Start Guide



Power cord



Owner's Manual



Remote control unit (RC004PMCD)



 
Safety Instructions



R03/AAA batteries



Cautions on Using Batteries



Audio cable



CD Player



Remote connector cable




# Setup

 There are four steps to the setup process.

## Required for Setup

---



Amplifier



Speaker systems



Speaker cables


---




These drawings are for illustrative purposes only and may not represent the actual product(s).

- 
- 1 Install batteries in the remote control unit
  - 2 Connect this unit to the amplifier
  - 3 Plug the power cord into a power outlet
  - 4 Begin CD playback
-


**1** Install batteries  
in the remote control unit

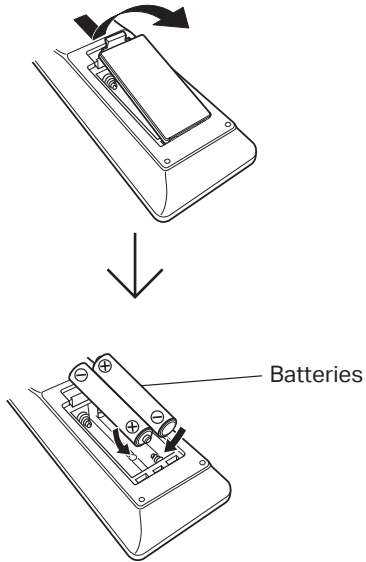

**2** Connect this unit to the amplifier

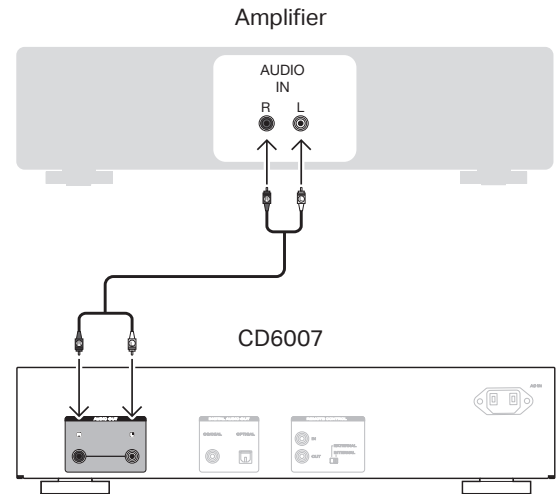


### 3 Plug the power cord into a power outlet

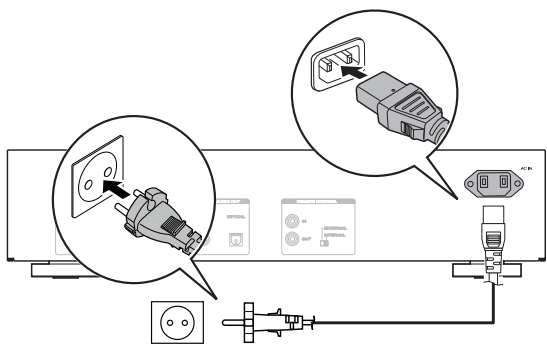

Connect to household power outlet (AC 230 V, 50/60 Hz)

Power cord (supplied)

### 4 Begin CD playback


1 Press POWER .




2 Press  to open the disc tray.



3 Place CD in the disc tray.

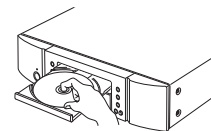

4 Press  to start playback.




# Owner's Manual

- Refer to the Online Manual for other functions information and operation procedure details.

**[manuals.marantz.com/CD6007/EU/EN/](http://manuals.marantz.com/CD6007/EU/EN/)**



Online Manual

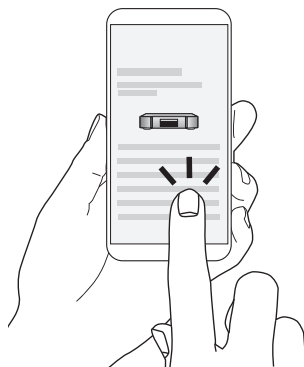

- For more information, visit **[www.marantz.com](http://www.marantz.com)**



**[www.marantz.com](http://www.marantz.com)**

You can find your nearest authorized distributor or dealer on our website.

**marantz** is a registered trademark.